

## ORGANIC POLLUTANT MONITOR

# **OPSA-150**




The OPSA-150 is a new organic pollutant monitor that uses Horiba's proprietary Rotary Cell Length Modulation, a measuring technique incorporating 25 years of expertise. The unit can be used as an organic pollutant monitor at drainage systems for determining compliance with COD / BOD monitoring regulations, for monitoring quality of water measuring levels of organic matter at water supply intakes, and as an organic monitor on process lines (phenol meter).


\*Pole mount, outdoor cover, and analysis panel are available as options.



### Sensor that makes full use of Rotary Cell Length Modulation

- · Zero drift correction is perfored in every cycle of measurement. This correction can eliminate the effect of any interference on cells.
- Cell length modulation provides readings from multiple measurements, making

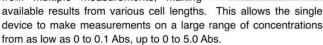

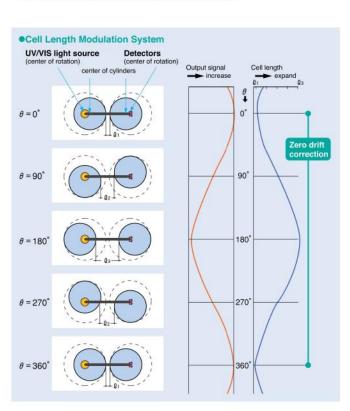



## Easy-to-use Control Panel

Control of the OPSA-150 is operated via the intuitively designed touch panel. An interactive setup screen eliminates any doubts that a user may have while operating the unit. The Converted COD and BOD/TSS +TURB Display allow reading to be confirmed on site.



#### Automatic Data Recording up to One Year

Internal data memory provides data strage for one year in case of one measuring value per hour. A Compact Flash card can be used to allow easy transfer of data to a PC.



# Horiba's Proprietary Wiper System

The cell is cleaned continuously by the wiper to eliminate any interference in the measurement light path. Therefore, errors in readings from dirty cells, or differences in results before and after cleaning are not evident.

#### Sample Failure Switch Input

The sample error alarm provided as an option on the previous OPSA-120 is now a standard feature.

#### Ten Times Increase in Analysis Sensitivity

The mimimum accuracy of analysis ability has been increased to 0.0001 Abs, a ten-fold increase over the previous OPSA-120 unit. Measurements can be made on concentrations as low as 0 to 0.1Abs.

# 

| Name   | Organic Pollutant Monitor  |
|--|--|
| Model name                                   | OPSA-150   |
| Measurement items                            | UV absorbance, VIS absorbance, Converted COD, BOD & TSS / TURB (turbidity) - Optional  |
| Principle                                    | UV-Vis Spectroscopy.   |
| Measurement wavelength                       | UV Multi-Spectrum  |
| Measurement Range                            | COD (0-5000 ppm), BOD (0-5000 ppm), TSS (0-5000 ppm), * Range can be easily customized as per requirement  |
| Construction of analysis section             | Rotary type  |
| Range (Equivalent to a cell length of 10 mm) | UV absorbance / VIS absorbance<br>0 to 0.1 Abs - 0 to 5.0 Abs (Can be set 0.1 Abs increments)  |
| Resolution                                   | 0.0001 Abs (Can be set to 0.001 Abs)   |
| Repeatability                                | Within $\pm 2\%$ of full scale (within $\pm 5\%$ if full scale is 2.6 to 5.0 Abs)  |
| Linearity                                    | Within $\pm 2\%$ of full scale (within $\pm 5\%$ if full scale is 2.6 to 5.0 Abs)  |
| Stability                                    | Within $\pm 2\%$ of full scale in 24 hours (within $\pm 4\%$ in 24 hours if full scale is 2.6 to 5.0 Abs)  |
| Response time                                | T 90 within 1 minute (flow rate of 5 L/min)  |
| Cleaning method (cleaning cycle)             | Automatic cleaning via wipers (continuous cleaning)  |
| Display methods                              | LCD display: 320 x 240 monochrome crystal display with backlight (touch panel type)  Display details: UV absorbance, VIS absorbance, UV-VIS absorbance (Absorbance can be changed to absorption constant (SAC: m <sup>-1</sup> ), Converted COD level, Converted turbidity level BOD + TSS   |
| Calibration method                           | Solution calibration (calibration solution inserted in ampule) via zero solution, span solution (single touch calibration)   |
| Sample conditions                            | Temperature: 2 to 40°C* Sample flow rate: Minimum 2 L/min, Maximum 20 L/min *Use a heating device to prevent sample freezing.  |
| Ambient conditions                           | Ambient temperature: 0 to 40°C, Ambient humidity: 85% or less  |
| Analog output                                | No. of outputs: 3 outputs (standard)  Type: Up to 3 can be chosen from UV absorbance, VIS absorbance, UV-VIS absorbance, Converted COD & BOD level, and Converted TSS level outputs  Specification: DC 4-20 mA, or DC 0-16 mA, isolated output (no isolation between each channel), maximum resistance load: 600 Ω   |
| Alarm and status outputs                     | No. of outputs: 6 outputs (standard)  Type: Up to 4 can be chosen from power failure, maintenance (standard and fixed), batch alarm, COD / BOD maximum limit alarm, TSS / TURB limit alarm (standard), light source error, sample failure, cleaning motor error, and analyzer error outputs  Details: Power failureoccurs when power fails  Total alarmcleaning motor error, light source error, analyzer error  Maintenanceoccurs when entering maintenance or correction mode, or when the maintenance switch has been turned on Specification: Dry contact output, NO contact  Contact rating: AC 125 V 0.3 A, DC 30V 1 A (with resistance load) Each output has an independent COM interface |
| Contact input                                | No. of inputs: 2 inputs (standard)  Type: Sample failure float switch input, time correction input  Specifications: No-voltage contact input (can connect to open collector), isolated input  On resistance: Maximum 100 Ω, Open voltage: DC 26 V, Short circuit current: 13 mA  |
| Communication                                | Interface: RS-232C Compatible Communication speed: 19200 bps   |
| Data memory                                  | Values of measurement items are stored in the main unit's data memory. Data can also be transferred to a Compact Flash can Memory interval: 1 minute or 1 hour  Memory save time: Every hour*  Data memory capacity: 1 minute intervalsfor 10 day's data, 1 hour intervalsfor 1 year's data  *The most recent data is saved to memory.   |
| Light source / Detector                      | Light source: Low pressure mercury lamp / Detector: Silicon photo cell   |
| Tubing connections                           | Sample entry: Rp-1/2 socket  Bypass outlet: Rc-1/2 socket  Overflow outlet (2): 20 A nominal diameter socket  Drain outlet: Rc-1/2 socket  Drain outlet: Rc-1/2 socket   |
| Construction                                 | For outdoor installation   |
| Material of parts in contact with sample     | SUS、PVC、PP、CR、SiO2   |
| Power source                                 | AC 100 V to AC 230 V ±10%, 50/60 Hz  |
| Power consumption                            | AC 100 V to AC 120 V: 45 VA maximum  |
| Weight                                       | Operating section: Approx. 5.0 kg Analyzer section: Approx. 5.6 kg   |
| External dimensions                          | Operating section: 240 (W) x 104 (D) x 320 (H)  Analyzer section: 200 (W) x 180 (D) x 403 (H) (units: mm) (excludes protruding sections)   |
| Color/Finish                                 | Munsell 5PB8/1   |
| Installation conditions                      | <ul> <li>Install on a flat stable surface away from sources of vibration and shocks.</li> <li>Ambient air must not contain dust, mist or corrosive gases.</li> <li>Use at atmospheric pressure.</li> <li>Out of direct sunlight.</li> <li>An area with good air circulation.</li> </ul>  |







